

# User Manual 17" / 19" LED-backlit LCD



Designed and manufactured by Austin Hughes

751

### **Legal Information**

First English printing, April 2025

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

### Safety Instructions

# Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labelled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

#### What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:

3
Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or
failure to follow instructions supplied with the product.
Repair or attempted repair by anyone not authorized by us.
Any damage of the product due to shipment.
Removal or installation of the product.
Causes external to the product, such as electric power fluctuation or failure.
Use of supplies or parts not meeting our specifications.
Normal wear and tear.

- ☐ Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

## **Regulatory Notices Federal Communications Commission (FCC)**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in business, industrial and commercial environments.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

# **Contents**

< Part. 1 >	RKP7 / RKP9	
1.1	Package Content	P.1
1.2	Structure Diagram & Dimension	P.1
1.3	Installation	P.3
1.4	Connection	P.4
< Part. 2 >	Specifications / OSD	
2.1	Product Specifications	P.5
2.2	Keyboard / Mouse Specifications	P.7
2.3	On-screen Display Operation ( OSD )	P.8
< Part. 3 >	Options	
3.1	HDMI, DVI-D, S-Video + BNC	P.10
3.2	DC Power: 12V / 24V / 48V / 125V / 250V	P.10
< Part. 4 >	KVM Integration	
4.1	RKP7 / RKP9	P.11

### **Before Installation**

- It is very important to mount the equipment in a suitable cabinet or on a stable surface.
- Make sure the place has a good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.

## Unpacking

The equipment comes with the standard parts shown in package content. Check and make sure they are included and in good condition. If anything is missing, or damaged, contact the supplier immediately.

## **How To Clean Your LCD Monitor**



## Caution :

- To avoid the risk of electric shock, make sure your hands are dry before unplugging your monitor from or plugging your monitor into an electrical outlet.
- When you clean your monitor, do not press down on the LCD screen. Pressing down on the screen can scratch or damage your display. Pressure damage is not covered under warranty.
- Use only cleansers made specifically for cleaning monitors and monitor screens. Cleansers not made to clean monitors and monitor screens can scratch the LCD display or strip off the finish.
- Do not spray any kind of liquid directly onto the screen or case of your monitor. Spraying liquids directly onto the screen or case can cause damage which is not covered under warranty.
- Do not use paper towels or abrasive pads to clean your monitor. Using an abrasive pad or any wood based paper product such as paper towels can scratch your LCD screen.

# **Cleaning Your Monitor**

To clean your LCD safely, please follow these steps:

- ① Disconnect the power cord.
- ② Gently wipe the surface using a clean, dry microfiber cloth. Use as little pressure as possible.

# **Cleaning Tough Marks and Smudges**

To remove tough marks and smudges, please follow these steps:

- ① Disconnect the power cord.
- Spray a small amount of non-abrasive cleanser on a microfiber cloth.
- Caution: Do not spray or apply any liquids directly onto the monitor. Always apply the solution to your microfiber cloth first, not directly on the parts you are cleaning.
- Gently wipe the surface. Use as little pressure as possible.
- Wait until your monitor is completely dry before plugging it in and powering it up.

# < 1.1 > Package Content




## RKP7 or RKP9 unit X 1

- WOM-01 wired mini USB optical mouse X 1
- CB-6A 6ft VGA console cable X 1
- Power cord X 1
- M6 screw, cage nut & cup washer X8




The above package content is only for the single console models. It varies with options such as KVM, HDMI, DVI-D, AV & DC power.

# < 1.2 > Structure Diagram

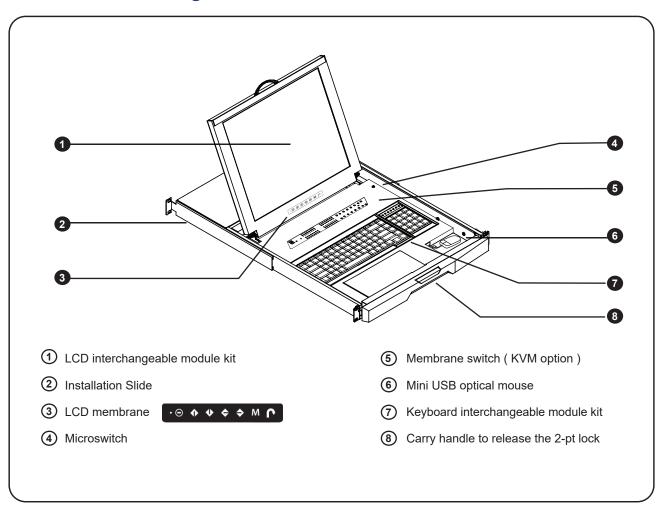

# < 1.2 > Dimension

 
### **Front View**



## **Rear View**



 
## **Side View**



## UNIT : mm 1mm = 0.03937 inch


# **Top View**

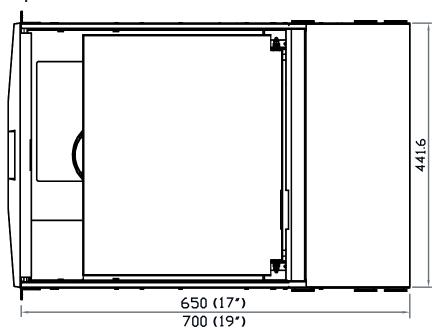

Model Product Dimension (W x D x H)		Packing Dimension (W x D x H)	Net Weight	Gross Weight
RKP7	442 x 650 x 44 mm	590 x 815 x 140 mm	14.3 kg	19.1 kg
	17.4 x 25.6 x 1.73 inch	23.2 x 32.1 x 5.5 inch	31.5 lb	42 lb
<b>RKP9</b> 442 x 700 x 44 mm 17.4 x 27.6 x 1.73 inch		595 x 910 x 140 mm	15.3 kg	20.1 kg
		23.4 x 35.8 x 5.5 inch	33.7 lb	44.2 lb




The weight is only for the single console models. It varies with accessories & options such as KVM, HDMI, DVI-D, AV & DC power.

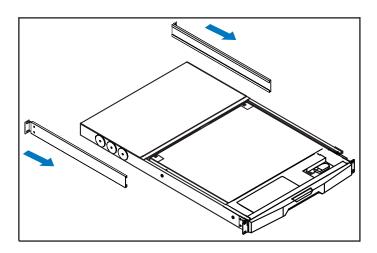


# Step 1

■ Insert the left and right rear mounting brackets into the LCD console drawer.

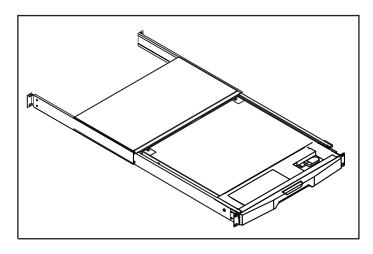

# Step 2

- Measure the depth of the front and rear mounting rails.
- Align each rear mounting bracket to a suitable length.

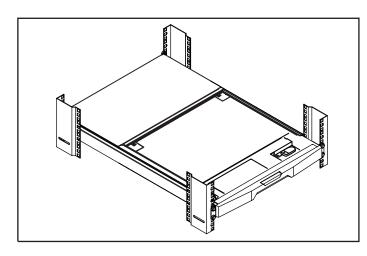

# Step

#### Complete the installation

■ Fix the LCD console drawer into the rack.




M6 screw, cage nut & cup washer x 8 are provided.




#### After use the drawer

Basically, user can push in the drawer back to park position by releasing the left & right slide lock arrow (as long as the drawer starts moving, he/she can release their finger right away, holding the arrow is not necessary).

# < 1.4 > Connection to USB Server via CB-6A cable

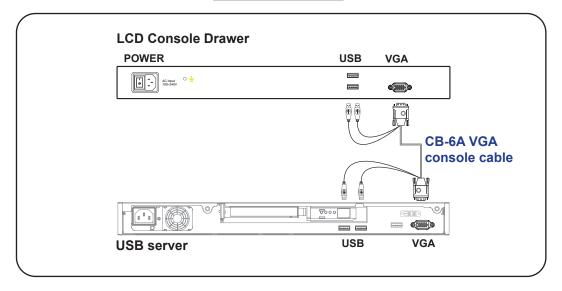

# < 1.4 > Connection to external KVM via CB-6A cable

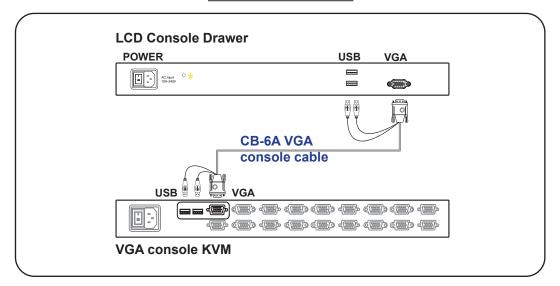



Caution: The LCD console drawer is hot-pluggable, but components of connected devices, such as the servers and KVM switch, may not be hot-pluggable. Plugging and unplugging cables while servers and KVM are powered on may cause irreversible damage to the servers, KVM and LCD console drawer. Before attempting to connect anything to the LCD console drawer, we suggest turning off the power to all devices. Apply power to connected devices again only after the LCD console drawer is receiving power. The company is not responsible for damage caused in this way.

# < 2.1 > Product Specifications

## RKP7 / RKP9

LED-backlit LCD Panel		RKP7	RKP9
	Manufacturer	VNO	Vno
	Panel Size ( diagonal )	17-inch TFT color LED-backlit LCD	19-inch TFT color LED-backlit LCD
	Display pixel ( dots x lines )	1280 x 1024	1280 x 1024
	Brightness ( typ. )	250	250
	Contrast Ratio ( typ. )	1000:1	1000:1
	Color	16.7 M	16.7 M
	Viewing Angle ( L/R/U/D )	85/85/80/80	85/85/80/80
	Response Time ( ms )	5	5
	Dot pitch ( mm )	0.264	0.294
	Display Area ( mm )	337.92H x 270.33V	376.32H x 301.06V
	Surface treatment	Haze 25%, I	Hard-coating
	Surface hardness	3H	3H
	Backlight Type	LED	LED
	MTBF ( hrs )	30,000	30,000

Video	Digital	HDMI	HDMI 1.4, HDCP 1.4
Connectivity		DVI	DVI-D, TMDS single link
	Analog	VGA	Analog 0.7Vp-p
		Composite ( BNC )	NTSC & PAL
		S-Video ( 4-pin )	NTSC & PAL
	Plug & Play	DVI / VGA	VESA EDID structure 1.3
	Synchronization	VGA	Separate, Composite & SOG

Power	Power Supply	Range	Auto-sensing 100 to 240VAC, 50 / 60Hz
	Power Consumption for Single Console	Screen ON	Max. 22W
		Power saving mode	Max. 2W
		Power button OFF	Max. 1W
	Power Consumption with KVM integration	Screen ON	Max. 55W
		Power saving mode	Max. 34W

<sup>\*</sup> For details, please refer to our KVM rear kit user manuals

Compliance	EMC	FCC & CE
	Safety	CE / LVD & UKCA
	Environmental	RoHS3 & REACH / WEEE

Environmental	Operating	Temperature	0 to 55°C degree
Conditions		Humidity	10~90%, non-condensing
		Altitude	16,000 ft
	Storage / Non-operating	Temperature	-20 to 60°C degree
		Humidity	5~90%, non-condensing
		Altitude	40,000 ft
		Shock	10G acceleration (11ms duration)
		Vibration	10~300Hz 0.5G RMS random


Physical Cresification		RKP7	RKP9
Specification	Product (WxDxH)	442 x 650 x 44 mm	442 x 700 x 44 mm
		17.4 x 25.6 x 1.73 inch	17.4 x 27.6 x 1.73 inch
	Packing (WxDxH)	590 x 815 x 140 mm	595 x 910 x 140 mm
		23.2 x 32.1 x 5.5 inch	23.4 x 35.8 x 5.5 inch
	Net Weight	14.3 kg / 31.5 lb	15.3 kg / 33.7 lb
	Gross Weight	19.1 kg / 42 lb	20.1 kg / 44.2 lb

<sup>\*</sup> All dimensions stated are subject to change if options are selected / integrated to base model part codes

Applicable Format	VGA Input	PC Signal	1280 x 1024 x 60 / 75Hz 1280 x 960 x 60Hz 1280 x 768 x 60 / 75Hz 1152 x 864 x 75Hz 1024 x 768 x 60 / 70 / 75Hz 848 x 480 x 60Hz 800 x 600 x 60 / 72 / 75Hz 720 x 400 x 70Hz 640 x 480 x 60 / 72 / 75Hz 640 x 400 x 70Hz 640 x 350 x 70Hz
	HDMI Input	PC Signal Video Signal	Same as VGA 720p : 50 / 60Hz
			480p : 60Hz
		Audio Signal	576p : 50Hz 2ch Linear PCM ( 32 / 44.1 / 48 KHz )
		Speaker	Dual Stereo Speaker, 2 x 2W



# G keyboard

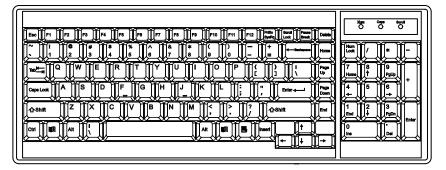



**WOM-01**Wired mini USB optical mouse

Key force	55 ± 5g
Travelling distance	3 ± 0.3mm
Switch life	> 10 million life cycle time
OS support	Windows / Linux / Unix / Mac OS

# **Supporting layouts**

**America** 



**EMEA** 














Asia






# < 2.3 > On-screen Display Operation ( OSD )

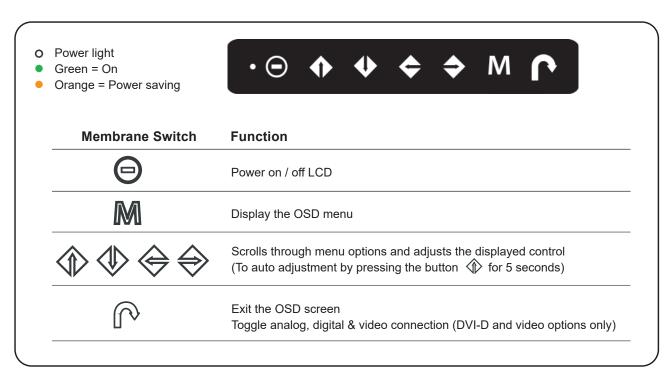

Select another video input (only available for models with multiple video input):

- (a) Press the button for to call up the on-screen video mode on top right corner.
- ( b ) Use up/down arrow 💠 🕸 to the select the video input
- ( c ) Press the button  $\begin{tabular}{l} \begin{tabular}{l} \begin{$

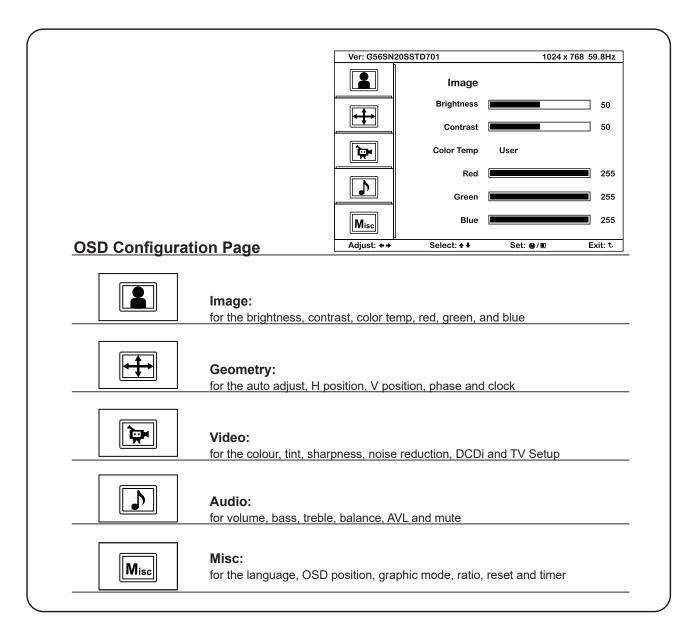

## < Part 3 >

## < 3.1 > Options:

# **AV4.4 Option**

- HDMI (HDMI 1.4, HDCP 1.4)- DVI-D (DVI-D TMDS single link)

 
- Audio input & output

# **HDMI Option**

- HDMI (HDMI 1.4, HDCP 1.4)- DVI-D (DVI-D TMDS single link)

# **BNC Option**


- BNC (S-Video + Composite, BNC)



# < 3.2 > Options : DC Power ○ ⊕ ⊕ ○

Model	12V	24V	48V	125V	250V
Input rating					
Input voltage:	12-Volt	24-Volt	48-Volt	110-Volt	300-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V	66 ~ 160V	180 ~ 425V
Input current					
- No load	50 mA	50 mA	50 mA	35 mA	10 mA
- Full load	4950 mA	2450 mA	1220 mA	749 mA	600 mA
Output rating					
Output voltage:	12-Volt	12-Volt	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A	6.25A	12.5A
Efficiency	84%	85%	85%	91%	86%
 
# **DC** power



#### \*\*\* For DC power option :

- (1) If the unit with LCD, earthing may be required
- (2) DC option excludes AC power adapter and power cord.

### www.austin-hughes.com/support/usermanual/cyberview/UM-CV-HDMIKVM-KIT.pdf

HDMI	Local	Remote	IP .	8-port	-	-
KVM	0	0	0	-801K	-	-

### www.austin-hughes.com/support/usermanual/cyberview/UM-CV-DVIKVM-KIT.pdf

DVI-D	Local	Remote	IP	12-port	-	-
KVM	1	0	0	-1201D	-	-

### www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MUKVM-KIT.pdf

Cat6	Local	Remote	IP	8-port	16-port	32-port
Matrix KVM	1	1	1	-	-MUIP1613	-MUIP3213
	1	1	2	-	-MUIP1624	-MUIP3224
	1	1	0	-	-MU1602	-MU3202
	1	2	0	-	-MU1603	-MU3203
	1	3	0	-	-MU1604	-MU3204

### www.austin-hughes.com/support/usermanual/cyberview/UM-CV-UKVM-KIT.pdf

Cat6	Local	Remote	IP	8-port	16-port	32-port
Combo KVM	1	0	1	-UIP802	-UIP1602	-UIP3202
rx v IVI	1	1	0	-U802	-U1602	-U3202
	1	0	0	-U801	-U1601	-U3201

## www.austin-hughes.com/support/usermanual/cyberview/UM-CV-MKVM-KIT.pdf

DB-15		Local	Remote	IP .	8-port	16-port	32-port
Matrix KVM	حرييي	1	1	1	-MIP813	-MIP1613	-
		1	1	2	-MIP824	-MIP1624	-
		1	1	0	-M802	-M1602	-
		1	2	0	-M803	-M1603	-
		1	3	0	-M804	-M1604	-

### www.austin-hughes.com/support/usermanual/cyberview/UM-CV-SKVM-KIT.pdf

DB-15 Combo KVM		Local	Remote	IP	8-port	16-port	32-port
	حرييين	1	0	1	-IP802	-IP1602	-
		1	1	0	-802	-1602	-
		1	0	0	-S801	-S1601	-

Model	Product Dimension (W x D x H)	Packing Dimension (W x D x H)	Net Weight	Gross Weight
RKP7 with KVM	441.6 x 650 x 44 mm	590 x 815 x 140 mm	14.7 kg	21.1 kg
	17.4 x 25.6 x 1.73 inch	23.2 x 32.1 x 5.5 inch	32.3 lb	46.4 lb
RKP9 with KVM	441.6 x 700 x 44 mm	595 x 910 x 140 mm	16.3 kg	21.5 kg
	17.4 x 27.6 x 1.73 inch	23.4 x 35.8 x 5.5 inch	35.9 lb	47.3 lb

