

User Manual

PPS-02-S, IP dongle GUI & SNMP

InfraPower Intelligent PDU



Designed and manufactured by Austin Hughes



Legal Information

First English printing, January 2018

Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. We are not liable for any injury or loss that results from the use of this equipment.

Safety Instructions

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

- Unplug equipment before cleaning. Don't use liquid or spray detergent; use a moist cloth.
- Keep equipment away from excessive humidity and heat. Preferably, keep it in an air-conditioned environment with temperatures not exceeding 40° Celsius (104° Fahrenheit).
- When installing, place the equipment on a sturdy, level surface to prevent it from accidentally falling and causing damage to other equipment or injury to persons nearby.
- When the equipment is in an open position, do not cover, block or in any way obstruct the gap between it and the power supply. Proper air convection is necessary to keep it from overheating.
- Arrange the equipment's power cord in such a way that others won't trip or fall over it.
- If you are using a power cord that didn't ship with the equipment, ensure that it is rated for the voltage and current labelled on the equipment's electrical ratings label. The voltage rating on the cord should be higher than the one listed on the equipment's ratings label.
- Observe all precautions and warnings attached to the equipment.
- If you don't intend on using the equipment for a long time, disconnect it from the power outlet to prevent being damaged by transient over-voltage.
- Keep all liquids away from the equipment to minimize the risk of accidental spillage. Liquid spilled on to the power supply or on other hardware may cause damage, fire or electrical shock.
- Only qualified service personnel should open the chassis. Opening it yourself could damage the equipment and invalidate its warranty.
- If any part of the equipment becomes damaged or stops functioning, have it checked by qualified service personnel.

What the warranty does not cover

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:
 - Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - Repair or attempted repair by anyone not authorized by us.
 - Any damage of the product due to shipment.
 - Removal or installation of the product.
 - Causes external to the product, such as electric power fluctuation or failure.
 - Use of supplies or parts not meeting our specifications.
 - Normal wear and tear.
 - Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

Regulatory Notices Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Content

< 1.1 >	IP Dongle GUI PPS-02-S Key Features	P. 1
< 1.2 >	IP Dongle Installation & Meter (PDU) Cascade	P. 2
< 1.3 >	Meter (PDU) Level Setting	P. 3
< 1.4 >	IP Dongle Configuration	P. 4
< 1.5 >	PPS-02-S IP Dongle GUI	P. 5
< 1.6 >	SNMP Setup	P. 10
< 1.7 >	IP Dongle Firmware Upgrade	P. 14
< 1.8 >	DHCP Setting	P. 16
< 1.9 >	Command Line Interface Access	P. 18

< 1.1 > IP Dongle GUI PPS-02-S Key Features

InfraPower Manager PPS-02-S is a **FREE** built-in GUI of each IP dongle (IPD-02-S only) to remotely monitor the connected PDUs (max. up to 16 PDU levels)

InfraPower PPS-02-S

Features		
Capacity	IP Dongle Group (Just 1 for 16 PDU levels)	1
	PDU number	16
	Concurrent Users	1
Enhanced Features	Outlet Level kWh & Amp Measurement	✓
	Outlet Scheduling	✓
	Energy Consumption (kWh) Monitoring	✓
	Apparent Power (kVA) Monitoring	✓
	Power Factor Measurement	✓
	Circuit Breaker (MCB) Monitoring	✓
Basic Features	Aggregate Current (Amp) Monitoring	✓
	Individual Outlet Switch ON/OFF	✓
	Temp-Humid Monitoring	✓
	Alarm Threshold Setting	✓
	Rising Alert Threshold Setting	✓
	Remote Access via Web	✓
	Graphic User Interface	✓
PDU Series Support	Single & 3 Phase W Monitored PDU	✓
	Single & 3 Phase Wi Monitored PDU (Outlet Measurement)	✓
	Single & 3 Phase WS Switched PDU	✓
	Single & 3 Phase WSi Switched PDU (Outlet Measurement)	✓
	Single Phase Dual Feed W Monitored PDU	✓
	Single Phase Dual Feed Wi Monitored PDU (Outlet Measurement)	✓
	Single Phase Dual Feed WS Switched PDU	✓
	Single Phase Dual Feed WSi Switched PDU (Outlet Measurement)	✓

< 1.2 > IP Dongle Installation & Meter (PDU) Cascade

IP Dongle Access to 16 PDU Levels

Patented IP Dongle provides IP remote access to the PDUs by a true network IP address chain. Only 1 x IP dongle allows access to max. 16 PDUs in daisy chain - which is a highly efficient application for saving not only the IP remote accessories cost, but also the true IP addresses required on the PDU management.

Hot-Pluggable design facilitates the IP dongle installation. Simply integrate the IP Dongle to the 1st PDU, then the entire daisy chain group can be remote over IP. Hence, administrator can remotely access all PDUs in the daisy chain group by one single IP via the IP Dongle.




Part no.
IPD-02-S

IP Dongle for vertical PDU & 2U rackmount PDU

- SNMP capability v2 / v3


Vertical IP dongle installation steps :

- slide the IP dongle on the plate above the meter
- plug the RJ-45 connector of IP dongle into the LINK port of the 1st level PDU meter
- use the CAT. 5 / 6 cable to connect IP dongle to network device

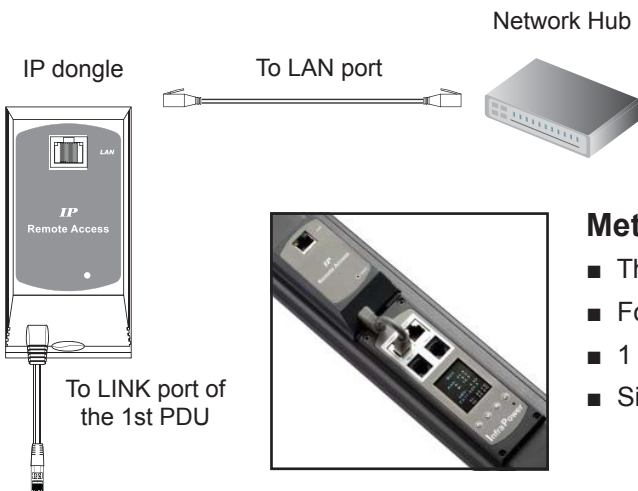

Meter (PDU) Cascade

- The PDU can be cascaded up to 16 levels
- For IP PDU access simply connect 1 x IP Dongle - IPD-02-S
- 1 x IP Dongle allows access to 16 levels
- Single & 3 Phase PDU can be inter-cascaded in the single daisy chain

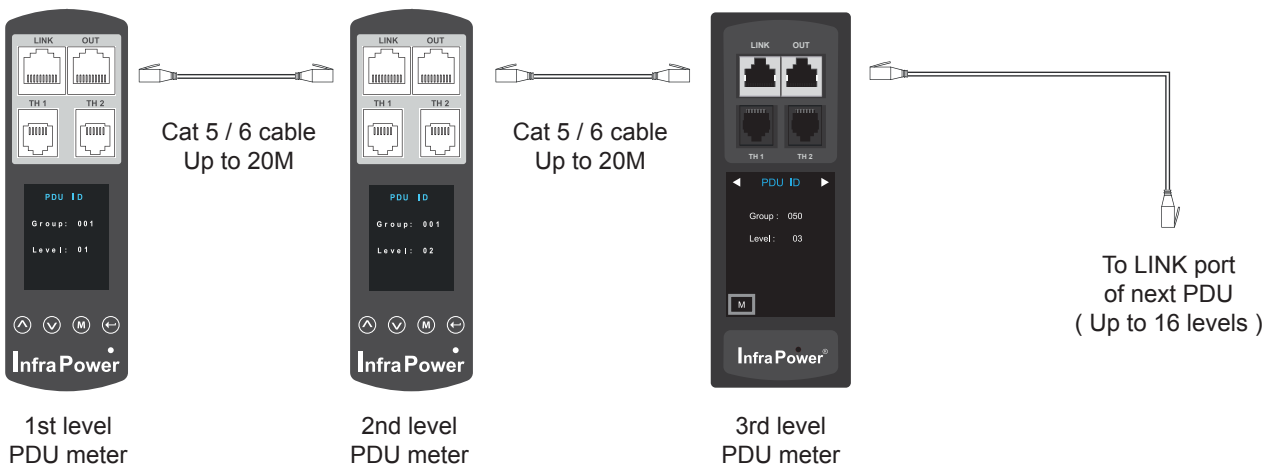

< 1.2 > IP Dongle Installation & Meter (PDU) Cascade




Part no.
IPD-H02-S

IP Dongle for 1U rackmount PDU

- SNMP capability v2 / v3

Installation steps :


- fix the IP Dongle on the rear side of rackmount PDU with 4 screws
- plug its RJ-45 connector into the LINK port of the 1st level PDU meter
- connect IP Dongle to network device via CAT. 5 / 6 cable

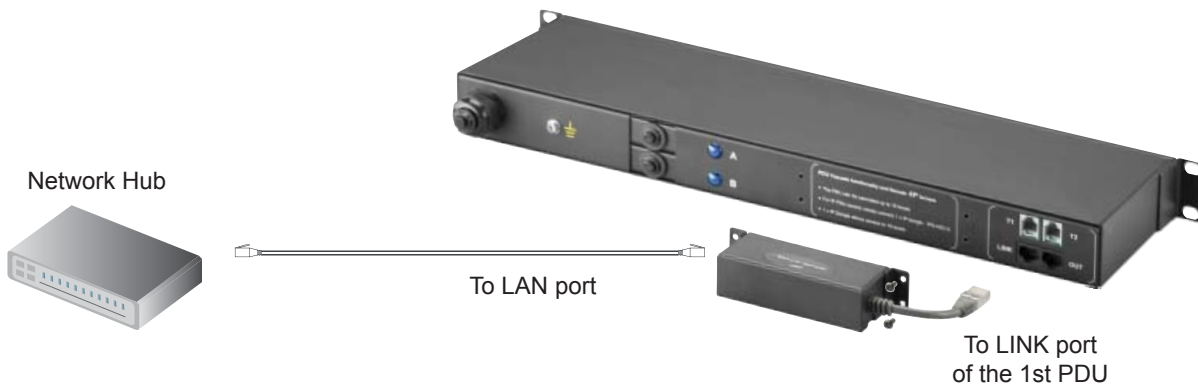

< 1.3 > Meter (PDU) Level Setting

(I) For 1.8" LCD Meter (No touchscreen function)


Display 9

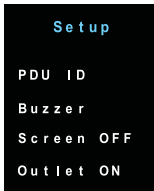

Step 1 - Press the & button to display no.9 and press to confirm

Step 2 - Press the & button to PDU ID and press to confirm


Display 9.1

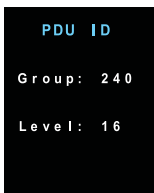


Step 3 - In display 9.1, Press the & button to select PDU level no. & press to confirm

Step 4 - Press to exit

(II) For 2.8" LCD Meter (With touchscreen function)

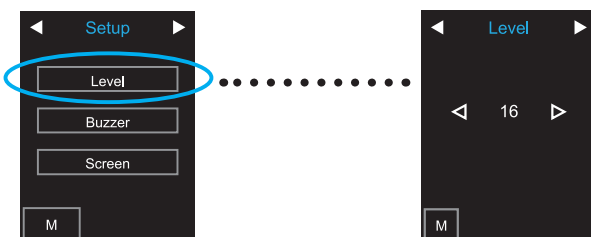



< 1.4 > IP Dongle Configuration

 The following steps show the static IP setting only. For DHCP setting, please refer to < 1.7 > DHCP Setting


After the completion of IP dongle connection, please take the following steps to configure the IP dongle :

- Step 1.** Prepare a notebook computer to download the IP setup utilities from the link :
<http://www.austin-hughes.com/support/utilities/infrapower/IPdongleSetup.msi>
- Step 2.** Double Click the and follow the instruction to complete the installation
- Step 3.** Go to each first level PDU with the notebook computer & a piece of CAT. 5 / 6 cable to configure the IP dongle by IP setup utilities as below. Please take the procedure for all IP dongles **ONE BY ONE**

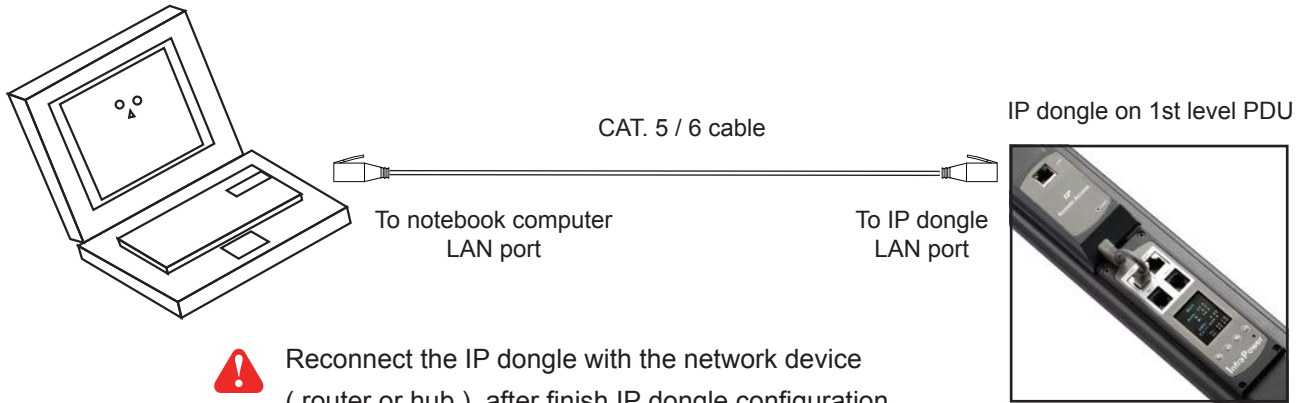

 Reconnect the IP dongle with the network device (router or hub), after finish IP dongle configuration.

Ensure the PDU in power ON status

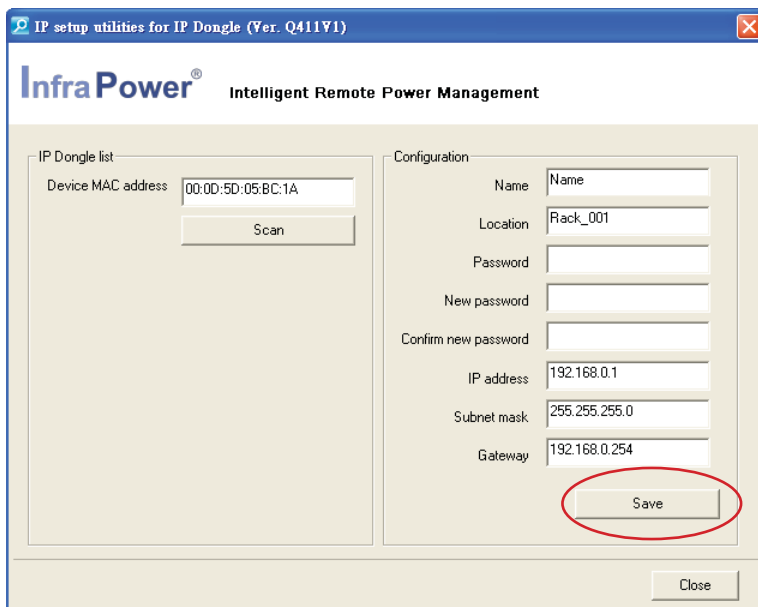


- Step 4.** Click “ **Scan** ” to search the connected IP dongle
- Step 5.** Enter device name in “ **Name** ” (min. 4 char. / max. 16 char.). Default is “ **Name** ”
- Step 6.** Enter device location in “ **Location** ” (min. 4 char. / max. 16 char.). Default is “ **Rack_001** ”
- Step 7.** Enter password in “ **Password** ” for authentication (min. 8 char. / max. 16 char.) Default is “ **0000000** ”
- Step 8.** Enter new password in “ **New password** ” (min. 8 char. / max. 16 char.)
- Step 9.** Re-enter new password in “ **Confirm new password** ”
- Step 10.** Change the desired “ **IP address** ” / “ **Subnet mask** ” / “ **Gateway** ”, then Click “ **Save** ” to confirm the changes


The default IP setting is as below:

IP address : 192.168.0.1
Subnet mask : 255.255.255.0
Gateway : 192.168.0.254

< 1.5 > PPS-02-S IP Dongle GUI

Each IP dongle (IPD-02-S) provides a **FREE** built-in GUI , PPS-02-S, which allows user, via a web browser, to see PDU's data and remotely manage the PDU over a TCP / IP Ethernet network.

 Each web browser window supports only one IP dongle (IPD-02-S). If user installs more IP dongles, multi windows will be required

 PPS-02-S is a management software with very limited features. User can use more advanced software, **InfraPower Manager IPM-04**

Device **Master IP Fan Unit**

Login name

Password

Step 1. Open Internet Explorer (I.E.), version 11.0

Step 2. Enter the configured IP dongle address into the I.E. address bar (Please refer to < 1.4 > IP dongle configuration)

Step 3. Enter “ **Login name** ” , “ **Password** ” & Click “ **Login** ” (Please refer to < 1.4 > IP dongle configuration)

In < **Status** > ,

- Click “ **Search** ” to search all new installed PDUs (If search fails, please refer to < 1.6 > for IP dongle firmware upgrade)
- View all installed PDUs' status
- View latest loading on each PDU's circuits
- View aggregate current & energy consumption on each PDU
- View status & latest reading of Temp. & Humid sensors connected to each PDU
- Click “ **Time Sync** ” update all connected PDU's real time clock from the computer logged in the IP Dongle

Level Name		Location		Amp					kWh	kVA	Total			TH 1		TH 2										
				Max.	Load	Alarm	R. alert	L. alert			Amp	kWh	kVA	°C	%	°C	%									
01	DSPWSI40-32A	Server_Rack_001R	I - A	16.0	0.0	12.8	0.0	0.0	0.00	0.00	I - B	16.0	0.0	12.8	0.0	0.0	0.00	0.00	0.00	26.5	49.0	-	-			
			II - A	16.0	0.0	12.8	0.0	0.0	0.00	0.00	II - B	16.0	0.0	12.8	0.0	0.0	0.00	0.00	0.00							
02	DSPWSI40-16A	Server_Rack_002R	I - A	16.0	0.0	12.8	0.0	0.0	0.00	0.00		-	-	-	-	-	-	-	0.0	0.00	0.00	23.9	55.5	-	-	
			II - A	16.0	0.0	12.8	0.0	0.0	0.00	0.00		-	-	-	-	-	-	-	0.0	0.00	0.00					
03	SPW48-32A	Server_Rack_003R	A	16.0	0.2	13.0	0.0	0.0	0.09	0.03	B	16.0	0.0	13.0	0.0	0.0	0.00	0.00	0.00	0.2	0.09	0.03	-	-	-	-
05	SPW48-32A	Server_Rack_005R	A	16.0	0.1	13.0	0.0	0.0	0.09	0.02	B	16.0	0.0	13.0	0.0	0.0	0.00	0.00	0.00	0.1	0.09	0.03	-	-	-	-
06	SPW8-16A	Server_Rack_006R	A	16.0	0.1	13.0	0.0	0.0	0.09	0.02		-	-	-	-	-	-	-	0.1	0.09	0.02	-	-	-	-	
07	SPW8-16A	Server_Rack_006L	A	16.0	0.2	13.0	0.0	0.0	0.09	0.03		-	-	-	-	-	-	-	0.2	0.09	0.03	-	-	-	-	
08	SPWSI8-32A	Server_Rack_004R	A	16.0	0.0	13.0	0.0	0.0	0.73	0.00	B	16.0	0.0	13.0	0.0	0.0	0.85	0.00	0.0	1.58	0.00	-	-	-	-	
09	SPW28-32A	Server_Rack_002R	A	32.0	0.1	19.9	0.0	0.1	0.09	0.03		-	-	-	-	-	-	-	0.1	0.09	0.03	-	-	-	-	
10	SPINLINE-32A	Server_Rack_001L	A	16.0	0.0	13.0	0.0	0.0	0.06	0.00		-	-	-	-	-	-	-	0.0	0.06	0.00	-	-	-	-	
11	default_ipd_name	default_ipd_loc.	A	16.0	0.0	13.0	0.0	0.0	0.00	0.00	B	16.0	0.0	13.0	0.0	0.0	0.00	0.00	0.0	0.00	0.00	-	-	-	-	
14	default_ipd_name	default_ipd_loc.	L1 - B1	16.0	0.0	13.0	0.0	0.0	0.66	0.00	L1 - B2	16.0	0.0	13.0	0.0	0.0	0.49	0.00	0.4	12.53	0.09	-	-	-	-	
			L2 - B3	16.0	0.0	13.0	0.0	0.0	0.10	0.00	L2 - B4	16.0	0.0	13.0	0.0	0.0	0.17	0.00				-	-	-	-	
			L3 - B5	16.0	0.0	13.0	0.0	0.0	1.63	0.00	L3 - B6	16.0	0.4	13.0	0.0	0.0	9.28	0.09				-	-	-	-	
16	default_ipd_name	default_ipd_loc.	L1 - B1	16.0	0.0	13.0	0.0	0.0	0.04	0.00		-	-	-	-	-	-	-	0.5	17.61	0.10	-	-	-	-	
			L2 - B2	16.0	0.0	13.0	0.0	0.0	0.18	0.00		-	-	-	-	-	-	-				-	-	-	-	
			L3 - B3	16.0	0.5	13.0	0.0	0.0	17.39	0.10		-	-	-	-	-	-	-				-	-	-	-	

< 1.5 > PPS-02-S IP Dongle GUI

In < Details > ,

- Change “ Name ” and “ Location ” of PDU & Click “ Apply ”
- Change “ Alarm amp. ” & “ Low alert amp. ” of PDU’s circuits & Click “ Apply ”
- Click “ Reset ” to reset peak amp. or kWh of PDU’s circuits
- Click “ ON / OFF ” to switch ON / OFF outlet (Switched PDU only)
- View On / Off status of each PDU’s outlet
- View aggregated current on the PDU
- View lastest loading & energy consumption of each PDU’s outlet (Outlet Measurement PDU only)
- Click “ Time Sync ” update PDU’s real time clock from the computer logged in the IP Dongle

Dual Feed PDU Details

Level : 01 DV32C13/8C19-32A-WSi Name : DSPWSI40-32A
 Status : Connected Location : Server_Rack_001R

I kWh : 0.00 Power factor : 0.00 Frequency : 50.0
 Load amp : 0.0 kVA : 0.00

I - A

Voltage :	199.7	Alarm amp :	<input style="width: 40px;" type="text" value="12.8"/>
Max. amp :	16.0	Rising alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Load amp :	0.0	Low alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Peak amp :	0.0	2015/01/01 00:11:48	<input type="button" value="Reset"/>
kWh :	0.00	2015/01/01 00:00:00	<input type="button" value="Reset"/>

I - B

Voltage :	199.7	Alarm amp :	<input style="width: 40px;" type="text" value="12.8"/>
Max. amp :	16.0	Rising alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Load amp :	0.0	Low alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Peak amp :	0.0	2015/01/01 00:00:00	<input type="button" value="Reset"/>
kWh :	0.00	2015/01/01 00:00:00	<input type="button" value="Reset"/>

Outlet	Name	Amp	kWh	kVA	Status	Switch
01	outlet_name_01	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
03	outlet_name_03	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
05	outlet_name_05	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
07	outlet_name_07	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
09	outlet_name_09	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
11	outlet_name_11	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
13	outlet_name_13	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
15	outlet_name_15	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C01	outlet_name_17	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C03	outlet_name_19	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>

Outlet	Name	Amp	kWh	kVA	Status	Switch
02	outlet_name_02	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
04	outlet_name_04	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
06	outlet_name_06	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
08	outlet_name_08	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
10	outlet_name_10	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
12	outlet_name_12	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
14	outlet_name_14	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
16	outlet_name_16	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C02	outlet_name_18	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C04	outlet_name_20	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>

Click outlet icon for setting

II kWh : 0.00 Power factor : 0.00 Frequency : 50.0
 Load amp : 0.0 kVA : 0.00

II - A

Voltage :	214.5	Alarm amp :	<input style="width: 40px;" type="text" value="12.8"/>
Max. amp :	16.0	Rising alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Load amp :	0.0	Low alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Peak amp :	0.0	2015/01/01 00:13:23	<input type="button" value="Reset"/>
kWh :	0.00	2015/01/01 00:00:00	<input type="button" value="Reset"/>

II - B

Voltage :	214.5	Alarm amp :	<input style="width: 40px;" type="text" value="12.8"/>
Max. amp :	16.0	Rising alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Load amp :	0.0	Low alert amp :	<input style="width: 40px;" type="text" value="0.0"/>
Peak amp :	0.0	2015/01/01 00:00:00	<input type="button" value="Reset"/>
kWh :	0.00	2015/01/01 00:00:00	<input type="button" value="Reset"/>

Outlet	Name	Amp	kWh	kVA	Status	Switch
01	outlet_name_21	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
03	outlet_name_23	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
05	outlet_name_25	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
07	outlet_name_27	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
09	outlet_name_29	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
11	outlet_name_31	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
13	outlet_name_33	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
15	outlet_name_35	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C01	outlet_name_37	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C03	outlet_name_39	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>

Outlet	Name	Amp	kWh	kVA	Status	Switch
02	outlet_name_22	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
04	outlet_name_24	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
06	outlet_name_26	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
08	outlet_name_28	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
10	outlet_name_30	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
12	outlet_name_32	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
14	outlet_name_34	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
16	outlet_name_36	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C02	outlet_name_38	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>
C04	outlet_name_40	0.0	0.00	0.0	ON	<input type="button" value="OFF"/>

Click outlet icon for setting

Auto data refresh : Untick during data input

 Save new data Synchronize this device time with computer

 Cancel new data input

* Press F11 to enlarge or diminish the screen

< 1.5 > PPS-02-S IP Dongle GUI

In < **Outlet setting** > ,

- Change PDU's outlet name
- Change “ **Power up sequence delay** ” of PDU's outlet (Switched PDU only)
- Change “ **Alarm amp.** ”, “ **Rising Alert amp.** ” & “ **Low alert amp.** ” of PDU's outlet (Outlet Measurement PDU only)

- ⚠ Click “ **Apply** ” to finish the above settings
- Click “ **Reset** ” to reset peak amp. or kWh of PDU's outlet (Outlet Measurement PDU only)

Outlet Setting

Level : DV/32C13/8C19-32A-WSI
Status : Connected
Name : DSPWSI40-32A
Location : Server_Rack_001R

I - A

Outlet :

Name :

Status : ON

Power up sequence delay : (Min. 1s , Max. 10s)

Load amp :

Alarm amp :

R. alert amp :

L. alert amp :

Peak amp : 2015/01/01 00:01:37

kWh : 2015/01/01 00:00:00

Save new data Return to Details
 Cancel new data input

< 1.5 > PPS-02-S IP Dongle GUI

In < TH status > ,

- View status, location, lastest reading & alarm setting of Temp. & Humid sensors connected to each PDU



The GUI will not show the readings if the TH sensors are **NOT** installed & activated.

TH Status											
IP dongle name : default_ipd_name											
IP address : 192.168.1.42											
PDU	Level	Name	Setting	Location	TH 1			TH 2			
					Temp. / Alarm / R.alert	Humid. / Alarm / R.alert	Temp. / Alarm / R.alert	Humid. / Alarm / R.alert			
	01	DSPWSI40-32A		Front_Top	27.3 / 35.0 / 0.0	46.6 / 65.0 / 0.0	22.6 / 35.0 / 0.0	68.8 / 65.0 / 0.0			
	02	DSPWSI40-16A		Front_Top	24.3 / 35.0 / 0.0	54.7 / 65.0 / 0.0	- / - / -	- / - / -			
	03	SPW48-32A		-	- / - / -	- / - / -	- / - / -	- / - / -			
	05	SPW48-32A		-	- / - / -	- / - / -	- / - / -	- / - / -			
	06	SPW8-16A		-	- / - / -	- / - / -	- / - / -	- / - / -			
	07	SPW8-16A		-	- / - / -	- / - / -	- / - / -	- / - / -			
	08	SPWSI8-32A		-	- / - / -	- / - / -	- / - / -	- / - / -			
	09	SPW28-32A		-	- / - / -	- / - / -	- / - / -	- / - / -			
	10	SPINLINE-32A		-	- / - / -	- / - / -	- / - / -	- / - / -			
	11	default_pdu_name		-	- / - / -	- / - / -	- / - / -	- / - / -			
	14	default_pdu_name		-	- / - / -	- / - / -	- / - / -	- / - / -			
	16	default_pdu_name		-	- / - / -	- / - / -	- / - / -	- / - / -			

Auto data refresh : ■■■■■■■■■■ Untick during data input

In < TH setting > ,

- Default TH setting : Deactivate
- “ **Activate** ” Temp. & Humid sensors ONLY when they are connected
- Change “ **Location** ” , “ **Rising alert Setting** ” & “ **Alarm Setting** ” of Temp. & Humid sensors
- Click “ **Apply** ” to finish the above settings



If no any TH sensor connected, NEVER activate.

TH Setting									
PDU : 01 DV32C13/8C19-32A-WSI									
Status : Connected									
Name : DSPWSI40-32A									
Location : Server_Rack_001R									

TH 1			
<input checked="" type="checkbox"/> Activate		<input type="checkbox"/> Deactivate	
Location : Front_Top			
Alarm		Rising alert	
Setting			
Temp. (°C) :	35.0	0.0	Reading
Humid. (%) :	65.0	0.0	46.6

TH 2			
<input checked="" type="checkbox"/> Activate		<input type="checkbox"/> Deactivate	
Location : sensor_location			
Alarm		Rising alert	
Setting			
Temp. (°C) :	35	0.0	Reading
Humid. (%) :	65	0.0	68.8

DO NOT activate T or TH sensor if no sensor installed.

When install T or TH sensor, please tick activate. Otherwise, no readings display.

Apply Save new data
Cancel Cancel new data input

Exit Return to Details

< 1.5 > PPS-02-S IP Dongle GUI

In < **System** > ,

- Change IP dongle name & location
- Change temperature unit displayed in UI
- Change IP dongle's IP address, subnet mask & gateway. (For static IP setting only)
- Select “ **ON** ” in “ **DHCP** ” to enable DHCP setting.
- Tick “ **Force HTTPS** ” to provide data transmission security.
- Click “ **Apply** ” to finish the above settings

IP Dongle

IP Dongle name :

Location :

Temperature unit : C F

IP settings

DHCP :

Address :

Subnet mask :

Gateway :

Security Force HTTPS

Operation Mode : InfraPower Manager IPM-04 Only
 WEB GUI + SNMP Only

Remarks : If you change the operation mode, the IP Dongle will reboot to make the change effective.

In < **Login** > ,

- Change “ **Login name** ” OR “ **Password** ”
- Re-enter password in “ **Confirm password** ”
- Click “ **Apply** ” and “ **OK** ” on the pop up window to make changes effective

Web UI

Login name

Password

Confirm password

< 1.6 > SNMP Setup

The IP dongle can manage the connected single & three phase intelligent PDUs in a single daisy-chain up to 16 levels via SNMP v1/v2 or v3 (Simple Network Management Protocol)

(I). Accessing MIB Files

Step 1. Click the following link to go to the mangement software download page :

<http://www.austin-hughes.com/resources/software/infrapower>

Step 2. Select the appropriate MIB file of the PDU series

(II). Enabling SNMP Support

i. The following steps summarize how to enable the IP Dongle for SNMP v1 / v2 support.


Step 1. Connect the IP Dongle to a computer. (Please refer to < 1.4 > IP dongle configuration)

Step 2. Open the Internet Explorer (I.E.) version 11.0

Step 3. Enter the configured IP Dongle address into the I.E. address bar.

Default IP address is “ **192.168.0.1** “


Step 4. Enter “ **Login name** “ & “ **Password** “. Default login name & password are “ **00000000** “

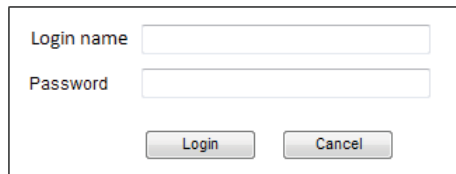


A screenshot of a login dialog box. It contains two text input fields: "Login name" and "Password". Below the fields are two buttons: "Login" and "Cancel".

< 1.6 > SNMP Setup

Step 5. Select the **SNMP** from the left navigation pane

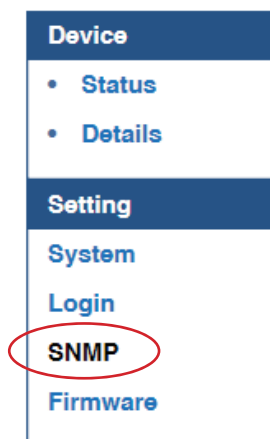

Step 6. The **SNMP** Settings window appears as below:

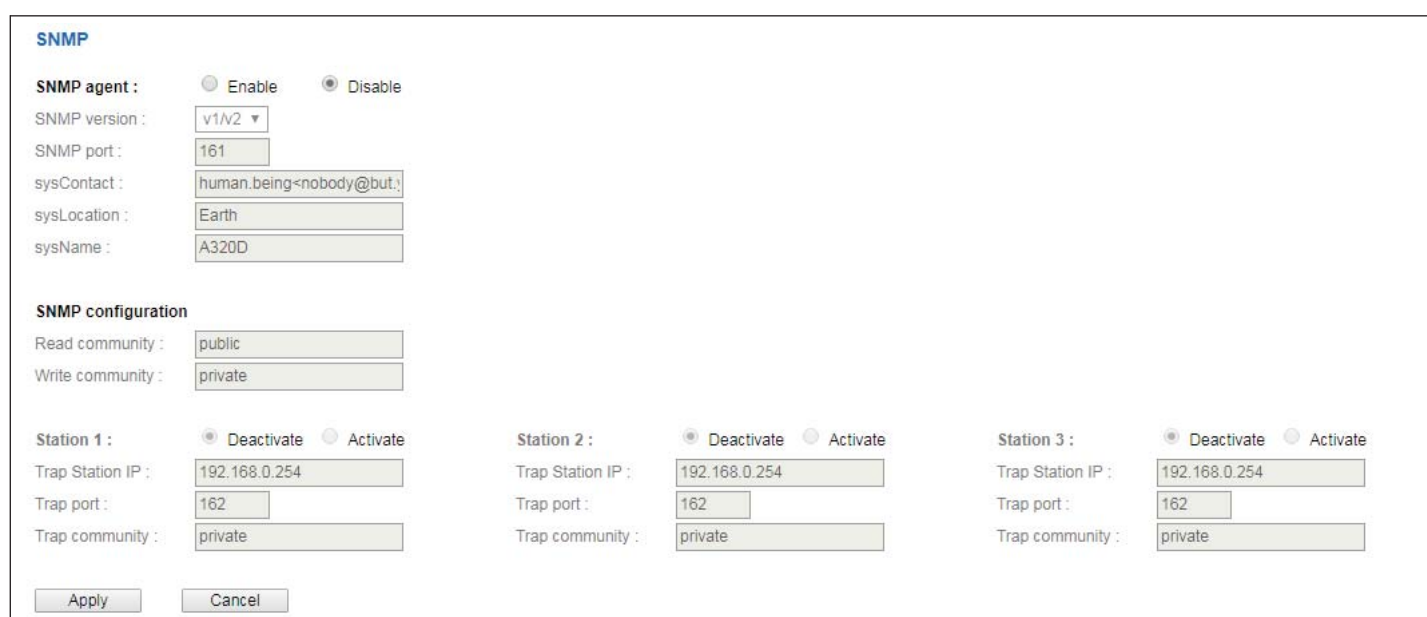A screenshot of the 'SNMP' configuration window. It has a title bar 'SNMP'. The 'SNMP agent' section has radio buttons for 'Enable' (selected) and 'Disable'. Below it are fields for 'SNMP version' (v1/v2), 'SNMP port' (161), 'sysContact' (human.being<nobody@but.), 'sysLocation' (Earth), and 'sysName' (A320D). The 'SNMP configuration' section has fields for 'Read community' (public) and 'Write community' (private). Below that are three 'Station' sections (Station 1, Station 2, Station 3). Each station has radio buttons for 'Deactivate' (selected) and 'Activate'. Each station also has fields for 'Trap Station IP' (192.168.0.254), 'Trap port' (162), and 'Trap community' (private). At the bottom are 'Apply' and 'Cancel' buttons.

Step 7. Click “ **Enable** “ in “ **SNMP agent** “ to start the SNMP agent service

Step 8. Select “ **v1/v2** “ in “ **SNMP version** “

Step 9. Input “ **SNMP port** “. Default is 161

Step 10. Input “ **sysContact** “. Default is human.being<nobody@but.you>

Step 11. Input “ **sysLocation** “. Default is Earth

Step 12. Input “ **sysName** “. Default is A320D

Step 13. Input “ **Read Community** “. Default is public

Step 14. Input “ **Write Community** “. Default is private

Step 15. Click “ **Activate** “ in Station 1 to enable the trap service

Step 16. Input “ **Trap Station IP** “ , “ **Trap Port** “ & “ **Trap Community** “ of Station 1

Step 17. Repeat Step 14 & 15 for Station 2 & 3

Step 18. Click “ **Apply** “ to finish the SNMP v1 / v2 settings

< 1.6 > SNMP Setup

ii. The following steps summarize how to enable the IP Dongle for SNMP v3 support.


Step 1. Connect the IP dongle to a computer. (Please refer to < 1.4 > IP dongle configuration)

Step 2. Open Internet Explorer (I.E.) version 11.0

Step 3. Enter the configured IP dongle address into the I.E. address bar
Default IP address is “ **192.168.0.1** “

Step 4. Enter “ **Login name** “ & “ **Password** “. Default login name & password are “ **00000000** “

Step 5. Select SNMP from the left navigation pane

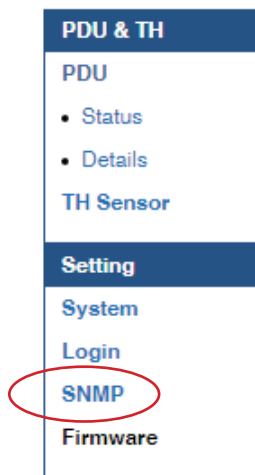

Step 6. The **SNMP** Settings window appears as below:

A screenshot of the 'SNMP' settings window. The window has a title bar 'SNMP'. It contains several sections: 'SNMP agent' with radio buttons for 'Enable' (selected) and 'Disable'; 'SNMP version' with a dropdown menu set to 'v1/v2'; 'SNMP port' with a text box containing '161'; 'sysContact' with a text box containing 'human.being<nobody@but.'; 'sysLocation' with a text box containing 'Earth'; and 'sysName' with a text box containing 'A320D'. Below this is the 'SNMP configuration' section with 'Read community' set to 'public' and 'Write community' set to 'private'. At the bottom, there are three 'Station' configuration blocks (Station 1, Station 2, Station 3). Each station has radio buttons for 'Deactivate' (selected) and 'Activate', and text boxes for 'Trap Station IP' (192.168.0.254), 'Trap port' (162), and 'Trap community' (private). At the very bottom are 'Apply' and 'Cancel' buttons.

< 1.6 > SNMP Setup

Step 7. Click “ **Enable** “ in “ **SNMP agent** “ to start the SNMP agent service

Step 8. Select “ **v3** “ in “ **SNMP version** “ & the SNMP v3 settings window appears as below :

SNMP

SNMP agent : Enable Disable

SNMP version : v3

SNMP port : 161

sysContact : human.being<nobody@but.

sysLocation : Earth

sysName : A320D

SNMP configuration

User 1 : Deactivate Activate

User role : read only

USM user : usm_user1

Auth algorithm : None

Auth password : *****

Privacy algorithm : None

Privacy password : *****

SNMP trap : Disabled

Trap Station IP : 192.168.0.254

Trap port : 162

User 2 : Deactivate Activate

User role : read only

USM user : usm_user2

Auth algorithm : None

Auth password : *****

Privacy algorithm : None

Privacy password : *****

SNMP trap : Disabled

Trap Station IP : 192.168.0.254

Trap port : 162

User 3 : Deactivate Activate

User role : read only

USM user : usm_user3

Auth algorithm : None

Auth password : *****

Privacy algorithm : None

Privacy password : *****

SNMP trap : Disabled

Trap Station IP : 192.168.0.254

Trap port : 162

Apply Cancel

Step 9. Input “ **SNMP port** “. Default is 161

Step 10. Input “ **sysContact** “. Default is human.being<nobody@but.you>

Step 11. Input “ **sysLocation** “. Default is Earth

Step 12. Input “ **sysName** “. Default is A320D

Step 13. Click “ **Activate** “ in User 1

Step 14. Select “ **Read Only** “ or “ **Read & Write** “ in User role :

Step 15. Input the name of “ **USM user** “. Default is usm_user1

Step 16. Select “ **None / MD5 / SHA** “ in “ **Auth algorithm** “.
If you select “ **Read & Write** “ in “ **User role:** “ ,
you **MUST** select “ **MD5 / SHA** “ in “ **Auth algorithm** “

Step 17. Input the “ **Auth password:** “ Default is “ 00000000 “

Step 18. Select “ **None / DES / AES** “ in “ **Privacy algorithm** “.
If the Auth algorithm is “ **NONE** “ , NO privacy algorithm can be selected.

Step 19. Input the “ **Privacy password** “

Step 20. If you want to receive trap message, select “ **Enable** “ in **SNMP trap**

Step 21. Input the “ **Trap Station IP** “ & “ **Trap port** “

Step 22. Repeat step 12 to 20 for User 2 & 3

Step 23. Click “ **Apply** “ to finish the SNMP v3 settings.

< 1.7 > IP Dongle Firmware Upgrade

< Firmware Upgrade >

For function enhancement of IP dongle WEB UI or fail to search the PDU, please take the following steps to remotely upgrade the IP Dongle firmware :

Step 1. Click the following link to go to the mangement software download page :

<http://www.austin-hughes.com/resources/infrapower/software>

Step 2. Select the appropriate IP Dongle firmware file of the PDU series

Step 3. Connect the IP Dongle to the computer. (Please refer to < 1.4 > IP dongle configuration)

Step 4. Open the Internet Explorer (I.E.) version 11.0

Step 5. Enter the configured IP Dongle address into the I.E. address bar.


Default IP address is “ **192.168.0.1** “

Step 6. Enter “ **Login name** “ & “ **Password** “. Default login name & password are “ **00000000** “



A login form with two input fields: "Login name" and "Password". Below the fields are two buttons: "Login" and "Cancel".

Step 7. Select the Firmware from the left navigation pane

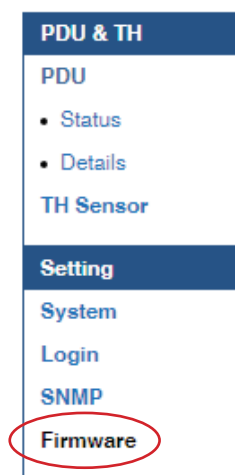

< 1.7 > IP Dongle Firmware Upgrade

Step 8. The firmware upgrade window appears as below :

Firmware

Device information

Device name : IP Dongle IPD-02s

Device IP address : 192.168.1.42

Device MAC address : C8:EE:08:00:36:CE

Firmware version : IPD-02-FW-v02

Hardware revision : 2.0

Upgrade firmware

File path :

Warning : Upgrading firmware may take a few minutes,
please don't turn off the power or press the reset button.

Step 9. Click “ **Browse** ” and select the firmware file (xxx.img) from the specific path in the pop up window and Click “ **Open** ”

Step 10. Click “ **Upgrade** ” to start the upgrade process. It takes a few minutes to complete.

Step 11. Once complete, UI will return to the login page.


< 1.8 > DHCP Setting

Step 1. Connect the IP dongle to the computer (Please refer to < 1.4 > IP dongle configuration)

Step 2. Open the Internet Explorer (I.E.) version 11.0

Step 3. Enter the default IP address of the IP dongle into the I.E. address bar.
Default IP address is “ **192.168.0.1** “


Step 4. Enter the “ **Login name** “ & “ **Password** “ . Default login name & password are “ **0000000** “

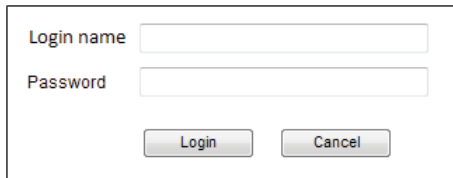


Login name

Password

Step 5. Select “ **System** “ from the left navigation pane

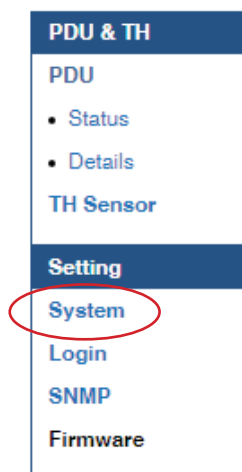

Step 6. Select “ **ON** “ from “ **DHCP** “ & click “ **Apply** “ to save the settings

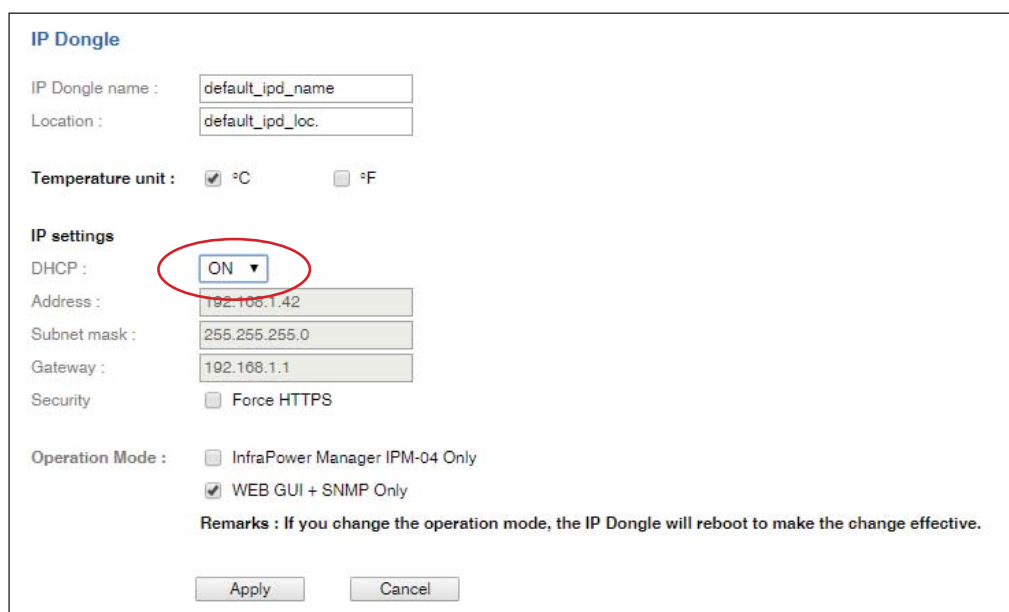

IP Dongle

IP Dongle name :

Location :

Temperature unit : °C °F

IP settings

DHCP :

Address :

Subnet mask :

Gateway :


Security Force HTTPS

Operation Mode : InfraPower Manager IPM-04 Only WEB GUI + SNMP Only


Remarks : If you change the operation mode, the IP Dongle will reboot to make the change effective.

< 1.8 > DHCP Setting

Step 7. Select “ **Firmware** ” from the left navigation pane

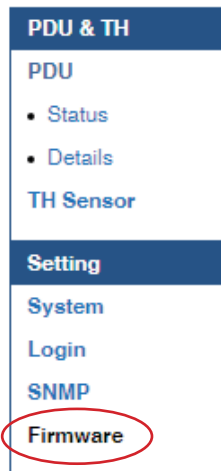

Step 8. Record the “ **Device MAC address** ”

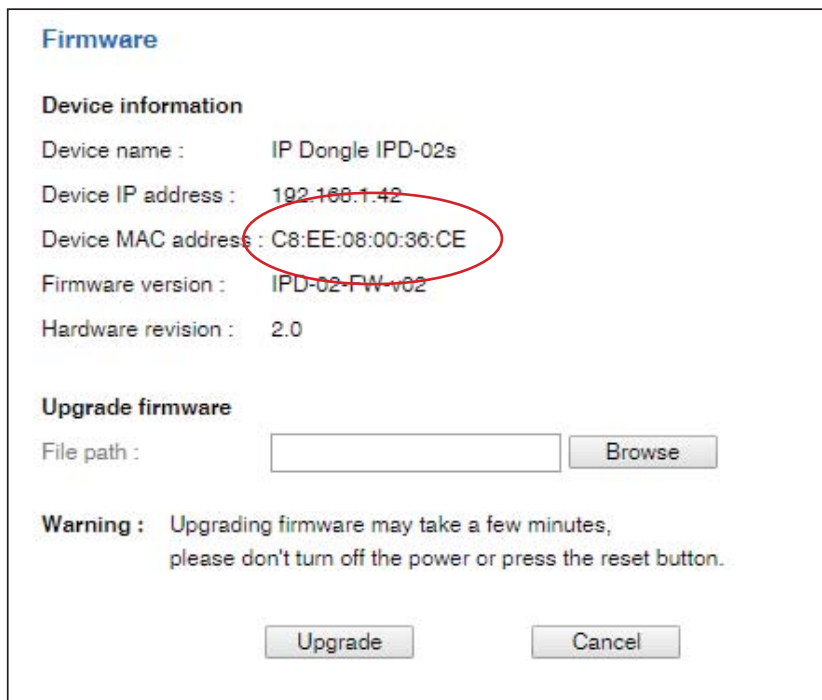

Step 9. Assign an IP address to the IP Dongle from your DHCP server.

..... • **Complete**

< 1.9 > Command Line Interface (CLI) Access

Command Line Interface (CLI) allows you access the IP dongle via Telnet or Secure Shell (SSH) to configure the system settings and login settings.

By default, CLI access via Telnet and SSH are both enabled whereas Telnet can be disabled.


Telnet provides the basic security of authentication by user name and password, but not the high-security benefits of encryption.

If you want high security access, you can use SSH for access to the command line interface. SSH encrypts user name, password and transmitted data.

If you use SSH to access the command line interface, DISABLE Telnet.

CLI and IP dongle WEBUI shares the same login name & password (default login name & password are " 00000000 ")

You can change the following settings via CLI access :

- i. System settings
 - Change temperature display unit : change the temp unit to be displayed in the WEBUI
 - Change system RTC date time : set the system time of the IP Dongle
 - Change network settings : change the IP settings of the IP Dongle
 - Change features & services
 - a. Enable / disable management software support
 - b. Enable / disable SNMP agent (ONLY shown when management software support is disabled)
 - c. Enable / disable WEBUI
 - d. Enable / disable FTP (Default is disable and it is for engineering service ONLY)
 - e. Enable / disable UDP (When disabled, IP dongle CANNOT be found by IP setup utilities)
 - f. Enable / disable Telnet
 -  If you are using WEBUI + SNMP operation mode, please go to the IP dongle WEBUI to search the connected PDU & configure the SNMP settings before you disable WEBUI via command line interface.
- ii. Login settings
 - Change login name
 - Change login password
 - Reset to default login name & password

The company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this publication.

All brand names, logo and registered trademarks are properties of their respective owners.

Copyright 2018 Austin Hughes Electronics Ltd. All rights reserved.