




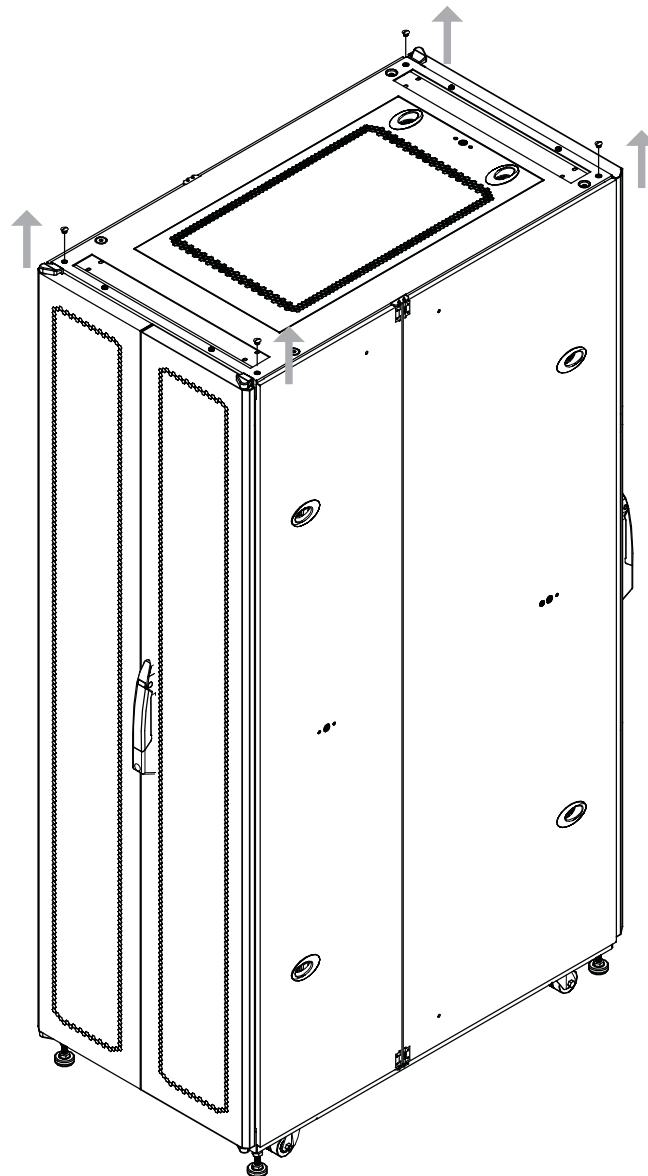

Step 1


Release 4 screws for next step

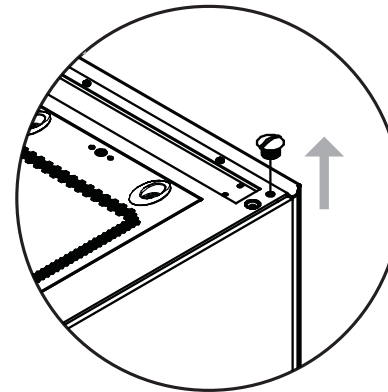

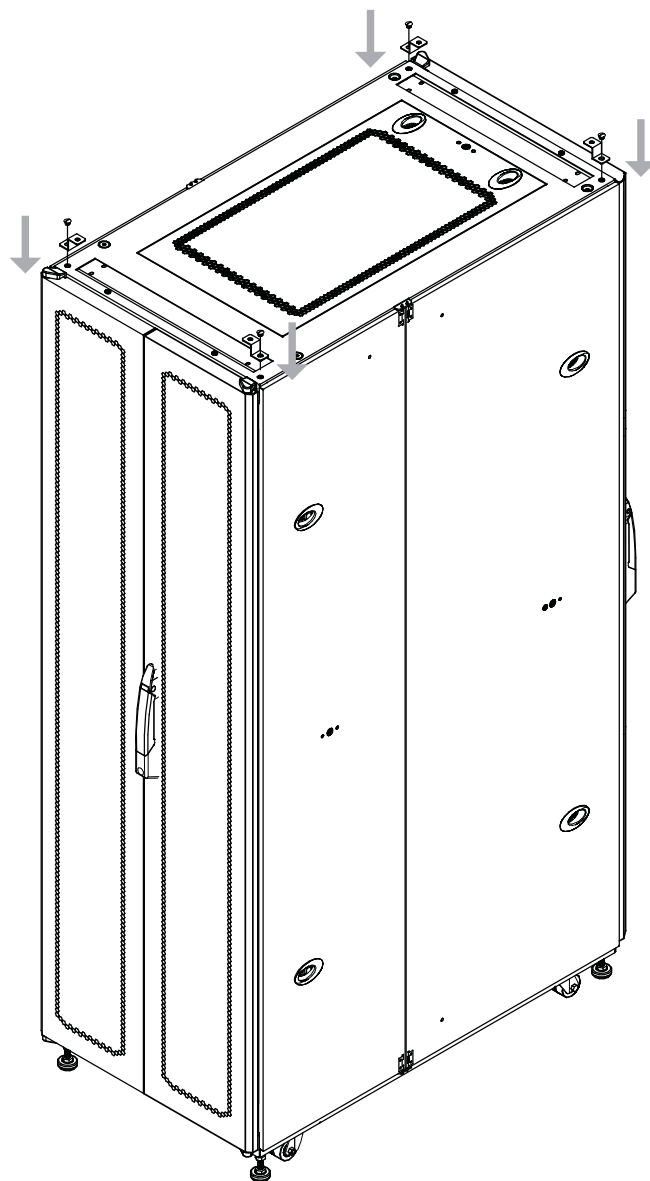


Step 2

Place 4 raised brackets with M10Ø15 screws

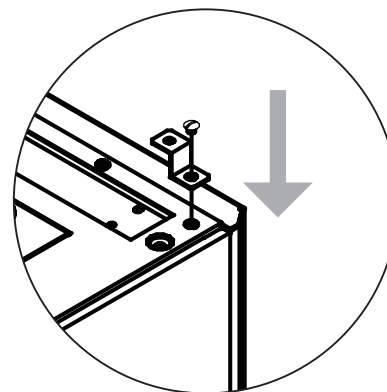

Z bracket

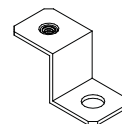


4 pcs

M10Ø15
screw from step 1




4 pcs

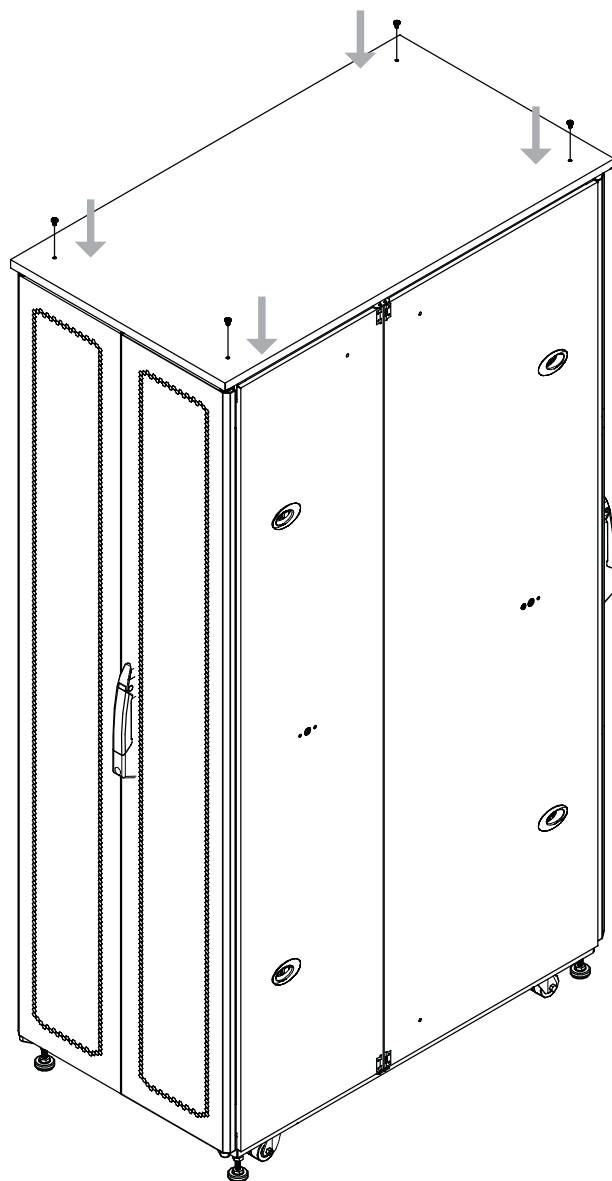


Step 3

Install the raised water resistant top cover

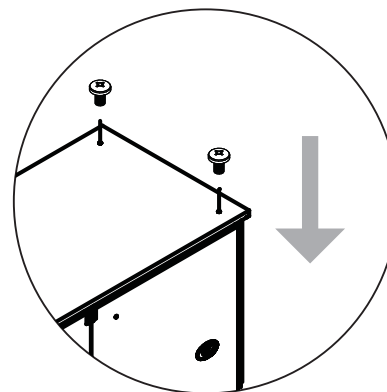

Raised Water
Resistant Top Cover



1 pc

M6 x 10mm
screw



4 pcs